

Geotech Portable Bladder Pumps

Installation and Operation Manual



Table of Contents

Section 1: System Description	4
Section 2: System Installation	6
Section 3: System Operation	8
Section 4: System Maintenance	13
Section 5: System Troubleshooting	21
Section 6: System Specifications	22
Section 7: Replacement Parts List	24
EC Declaration of Conformity	32
The Warranty	33

DOCUMENTATION CONVENTIONS

This document uses the following conventions to present information:



WARNING

An exclamation point icon indicates a **WARNING** of a situation or condition that could lead to personal injury or death. You should not proceed until you read and thoroughly understand the **WARNING** message.



CAUTION

A raised hand icon indicates **CAUTION** information that relates to a situation or condition that could lead to equipment malfunction or damage. You should not proceed until you read and thoroughly understand the **CAUTION** message.



NOTE

A note icon indicates **NOTE** information. Notes provide additional or supplementary information about an activity or concept.



In order to ensure that your pump has a long service life and operates properly, adhere to the cautions below and read this manual before use.

For long-term storage greater than 1 week, care should be taken to clean and dry all pump components. This will help with long-term reliability. An inert lubricant can be used on the O-ring seals to promote longevity and elasticity.

Pump operation and decontamination should be performed to your standard operating procedures.

Operation of system utilizing non-Geotech OEM parts could result in equipment failure or malfunction and may void warranty. This includes air and fluid tubing.

Avoid operating the system without securely anchoring safety cable attached to down well components.

Always wear appropriate gloves and be mindful of contaminated fluids contacting your person and entering the environment when operating any ground water sampling device.



WARNING

Do not operate this equipment if it has visible signs of significant physical damage other than normal wear and tear.



Notice for consumers in Europe:

This symbol indicates that this product is to be collected separately.

The following applies only to users in European countries:

- This product is designated for separate collection at an appropriate collection point. Do not dispose of as household waste.
- For more information, contact the seller or the local authorities in charge of waste management.

Section 1: System Description

Function and Theory

Geotech's pneumatic Portable Bladder Pumps operate with a unique action, ideal for both gentle low-flow sampling and higher flow rate purging. Timed ON/OFF cycles of compressed air alternately squeeze the flexible bladder to displace water out of the pump to the surface and then exhaust the air allowing the pump to refill.

Fluid enters the pump through the fluid inlet check valve at the bottom of the pump body via hydrostatic pressure. The pump must be submerged to operate. The bladder then fills with fluid. Compressed air enters the space between the bladder and the interior of the pump housing. The intake check valve closes and the discharge check valve (top) opens. Compressed air squeezes the bladder, pushing the fluid to the surface (see figure 1-1). The discharge check valve prevents back flow from the discharge tubing. Driven by the Bladder Pump Controller (BP Controller) or Geocontrol PRO, this cycle automatically repeats.

Compressed air does not contact the sample. The bladder prevents contact between the pump drive air and the sample.

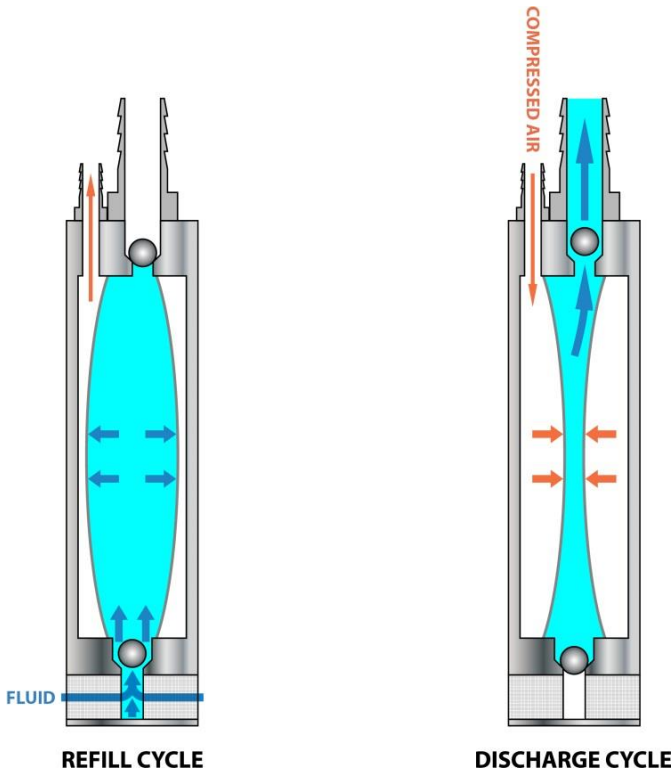


Figure 1-1: Bladder Pump Operation



Read and understand your portable generator and/or portable air compressor user manual for proper installation and operation and Earth grounding instructions. If using portable compressed gas tanks, exercise proper caution, use safety protection devices as outlined by the supplier, and observe any additional safety requirements mandated by local jurisdiction.

System Components

A Geotech Portable Bladder Pump consists of four components as follows:

- Bladder Assembly
- Pump Housing
- Internal Tube Assembly
- Intake Screen Assembly

* *Optional: Drop Tube Intake Assembly. See Section 7: Replacement Parts List.*

Bladder Assembly

The bladders are extruded PTFE to provide a long life and to ensure undisturbed samples. The internal bladders are easily replaceable, see *Section 4: System Maintenance*.

Pump Housing

The bladder pump housing is constructed of electro polished 316 Stainless Steel. The housing components consist of threaded top and bottom caps, and the housing tube. Viton O-rings provide the high-pressure seals between the end caps and the housing tube.

Intake screen

The intake filter screen is constructed of 316 Stainless Steel and is easily removable for field maintenance. The intake filter screen protects and extends the life of the bladder material (see *Warranty*).

Optional Drop Tube Intake Assembly

An optional drop tube can be used to sample from depths below the specified maximum sampling depth. The drop tube assembly connects a remote intake to the pump through a tube connected to the pump inlet. The intake depth can be any custom length of tubing. The pump assembly itself must be submerged below the water level. This means the depth to water cannot exceed the maximum pumping depth of the pump.

Section 2: System Installation

The user must determine site-specific parameters such as water level, recharge rate and adherence to low flow purging guidelines.



Read the following before installation to prevent damage to the bladder pump.

Safety Cable

Before deploying any sampling pump, secure a safety cable from an anchoring point at or near the wellhead to the top of the pump.

Pump Controller

Geotech Portable Bladder Pumps can be operated with Geotech's Geocontrol PRO, BP Controller 300PSI, or BP Controller 500PSI. Be sure to consult the user guide of the controller you are using.



Use of an air source and controller *not* supplied by Geotech could result in pressure buildup and unexpected pressure storage in the pump and airline. Therefore, operation of the pump is not recommended with equipment other than that provided by Geotech.

The Geocontrol PRO is an easy-to-use portable compressor and logic unit specifically designed to operate Geotech's Portable Bladder Pumps.



In the case a Portable Bladder Pump is deployed deeper than 155' (47m) with a Geocontrol PRO, the pump's overall flow rate will slightly decrease. To obtain full bladder volumes in this scenario, please use the BP Controller 300PSI.

Pump Tubing Lines

The Geotech Portable Bladder Pump requires two tubing lines. One of the lines is used for the air supply and exhaust. The second line is used for discharge fluid. See *Section 6: System Specifications* of this manual for tubing sizes. When using the 1.66" (4cm) diameter pump, the larger diameter tube is for fluid and the smaller one for air.



On the .675" (1.7cm) and .85" (2cm) diameter pumps, both air and fluid lines are the same size. The letter "A" is stamped near the hose barb on the top of the pump. This indicates the air supply. The remaining barb is for the discharge fluid line.



Failure to attach air and fluid lines to the appropriate ports could result in damage to the bladder.

Reverse Coil Method

When lowering the pump into the well it is important to reverse the natural bend of the coiled tubing so the tubing will straighten out as it is lowered (see Figure 2-1). As the pump and tubing are lowered into the well, the direction of the bend should be reversed from the direction in which it is coiled. If the tubing is allowed to uncoil naturally and the natural bend not interrupted, the tubing will continue its coil into the well. Using the reverse coil method will avoid hang-ups or difficulty in lowering the pump into the well, especially when the well is not vertical, or has come out of alignment for any reason.

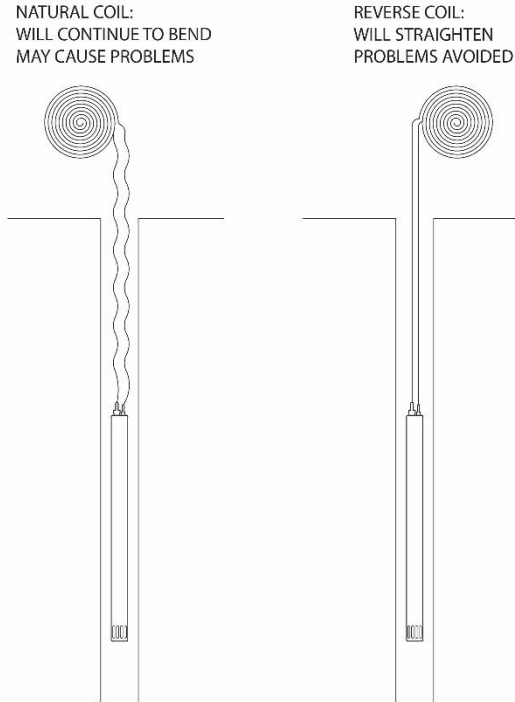


Figure 2-1: Reverse Coil Method

Optional Drop Tube Assembly

If a Drop Tube Intake assembly is employed, a third tubing line is necessary to connect from the bottom of the bladder pump to the top of the Drop Tube intake.

For deployment of optional Drop Tube Assembly, attach desired length of drop tube between the intake's hose barb and hose barb on bottom of pump. For added security, a safety cable may be installed to support the drop tube intake to the bottom of pump.

Send the drop tube intake down the well followed by the drop tube tubing, then the pump and finally the air and fluid discharge lines.

Section 3: System Operation

Once tubing and safety cable are connected, slowly deploy the pump into the well. If depth to water is known, a mark can be placed on the tubing to indicate when the pump has reached the desired level.

The pump must be fully submerged. Optimal pump performance is achieved with submergence of greater than 10' (3m) of water column. Less submergence could result in reduced pump performance depending on type of fluid* being pumped and physical condition of the bladder. Older, worn bladders can develop a shape memory and may not be able to fill completely without sufficient submergence. Pumping will still be achieved and the sampling event can be completed.

** designed for pumping groundwater only, other fluids at user's risk*



A thin, less rugged bladder could fill more easily in lower submergence applications. Geotech has chosen to implement the use of more reliable heavy walled Poly or robust PTFE material to accommodate longer life of the bladder and overall reliability of the pump.

Once the pump is at the desired level within the well, set the controller DISCHARGE and FILL timers. These settings should be such that the bladder is never over compressed. Set the pressure cycle so the fluid stream exiting the fluid line just starts to fall off when the DISCHARGE timer expires. If the controller being used has a pressure gauge, you will notice the pressure level will increase and then stabilize during pumping and start to increase after all of the water has been evacuated from the pump. If you notice the pressure increasing after a pump cycle, reduce DISCHARGE TIME.

Using the *Example Flow Rates*, set the FILL TIME to optimize the amount of fluid discharged during the pressure cycle.

Both FILL TIME and DISCHARGE TIME will vary depending on submergence, depth to water, tubing size and overall tubing length.

More information can be found in the user manual specific to the controller you are using.

Flow Rates

Bladder Pump flow rates are influenced by pump size (diameter and length), pump depth and submergence, as well as controller selection (i.e.: compressor performance, valve flow coefficient). A large pump at shallow depths will produce the most flow, and a small pump at maximum depths will produce the least amount of flow.

Factors that increase flow:

- increased submergence (depth of pump below water line).
- a strong compressor, like the Geocontrol PRO, will enable fast pressure build up in the airline tubing and pump cavity.
- a clean intake screen will maximize the amount of water entering into the pump.

Example flow rates:

Table 3-1: Flow Rates with a 25' (7.6m) Airline

@ 25 ft. (7.6 m) airline* (3 ft. (0.9 m) submergence)				
Pump Size:	Discharge Tube Size:	Flow:	Approx. Geocontrol PRO Settings	
			Fill Time:	Discharge Time:
1.66 x 36" (4 x 91 cm)	1/4" ID x 3/8" OD (64 x 127 mm)	43 oz/min (1.3 L/min)	10 sec.	7 sec.
1.66 x 18" (4 x 46 cm)		33 oz/min (1 L/min)	5 sec.	5 sec.
0.85 x 18" (2.2 x 46 cm)	.17" ID x 1/4" OD (43 x 64 mm)	20 oz/min (0.6 L/min)	1 sec.	2 sec.
0.675 x 18" (1.7 x 46 cm)		10 oz/min (0.3 L/min)	1 sec.	2 sec.

Table 3-2: Flow rates with a 150' (46m) Airline

@ 150 ft. (46 m) airline* (3 ft. (0.9 m) submergence)				
Pump Size:	Discharge Tube Size:	Flow:	Approx. Geocontrol PRO Settings	
			Fill Time:	Discharge Time:
1.66 x 36" (4 x 91 cm)	1/4" ID x 3/8" OD (64 x 127 mm)	9 oz/min (260 mL/min)	20 sec.	55 sec.
1.66 x 18" (4 x 46 cm)		6 oz/min (175 mL/min)	15 sec.	40 sec.
0.85 x 18" (2.2 x 46 cm)	.17" ID x 1/4" OD (43 x 64 mm)	2 oz/min (59 mL/min)	8 sec.	30 sec.
0.675 x 18" (1.7 x 46 cm)		1 oz/min (27 mL/min)	5 sec.	25 sec.

* Airline tubing size: .17"ID x 1/4" OD (4 x 6 mm)



Flow rates are based on 3' (0.9m) of pump submergence. Typically, field environments will provide greater submergence (10 ft. + (3 m)), which will increase flow.

Speak with a Geotech representative to determine the best configuration to fulfill your sampling needs.

Selecting an Air Source

The Geocontrol PRO is an easy-to-use portable compressor and logic unit, specifically designed to operate portable Bladder Pumps deployed down to 180' (55m) or less.

Air consumption depends on the volume of tubing and the size of deployed Bladder Pump. Follow the general guidelines and examples below to calculate the air consumption for specific sampling configurations.

Volume of Tubing

TUBE I.D.	TUBING LENGTH					
	1 ft./ 0.3 m	10 ft./ 3 m	50 ft./ 15 m	100 ft./ 30 m	250 ft./ 76 m	500 ft./ 152 m
0.17 in/ 0.43 cm	0.3 in ³ / 5 cm ³	3 in ³ / 50 cm ³	15 in ³ / 246 cm ³	30 in ³ / 492 cm ³	75 in ³ / 1230 cm ³	150 in ³ / 2460 cm ³
0.25 in/ 0.64 cm	0.6 in ³ / 10 cm ³	6 in ³ / 100 cm ³	30 in ³ / 492 cm ³	60 in ³ / 984 cm ³	150 in ³ / 2460 cm ³	300 in ³ / 4920 cm ³

Air Volume of Bladder Pumps

BP DIAMETER	BP LENGTH	VOLUME (in ³)
1.66 in/ 4 cm	36 in/ 91 cm	78 in ³ / 1278 cm ³
1.66 in/ 4 cm	18 in/ 46 cm	39 in ³ / 640 cm ³
0.85 in/ 2.2 cm	18 in/ 46 cm	10 in ³ / 164 cm ³
0.675 in/ 1.7 cm	18 in/ 46 cm	6 in ³ / 100 cm ³

Calculation guideline:

Volume of Tubing (in³/cm³)

+ Volume of Bladder Pump (in³/ cm³)

= Air Consumption per cycle (in³/ cm³)

If planning to use an air compressor, use one with a reserve tank to insure proper air supply to the pump. If using a Nitrogen Tank, see Figure 3-1 for Nitrogen Tank Volume vs. Bladder Pump consumption.

NITROGEN TANK VOLUME VS BLADDER PUMP CONSUMPTION

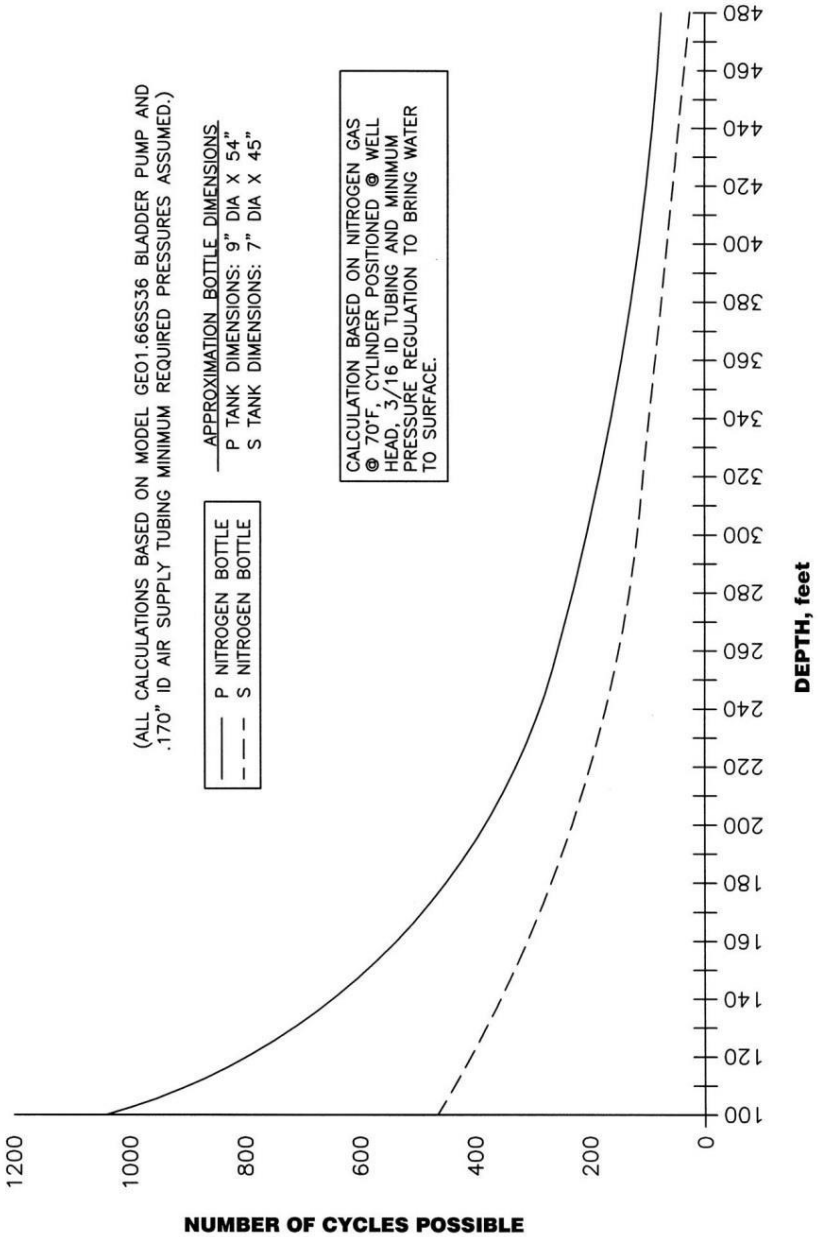


Figure 3-1: Tank Volume vs. BP Consumption

Determining PSI

Determine the air pressure needed to operate the Bladder Pump based on the length of the air supply line to the pump (well depth). Use the simplified formula:

0.5 PSI (per foot) + 10 PSI (to account for tubing friction) = required PSI

0.12 bar (per meter) + 0.7 bar (to account for tubing friction) = required bar

As mentioned above, the additional 10 PSI/ 0.7 bar is to account for the pump itself and friction loss along the airline tubing. When the length of the airline is 50' (15m) or less, there is no need for the additional pressure.

To determine minimum operating pressures for the specific Bladder Pump model you are using, consult the pump's specifications. Typically, the minimum operating pressure will be 5 PSI/ 0.4 bar above static head.



The formulas stated above are not absolute, and are meant to provide baseline information.

Section 4: System Maintenance

Remove the pump from the well. It is not necessary to remove the air and sample lines from the pump. Upon removal, the pump may be filled with fluid.

Bladder Removal Steps (all models)

1. Remove the bottom intake assembly and outer housing by turning the housing counter-clockwise.
 - Use your hand or a strap wrench
 - If the pump does not easily come off, use the wrench flats on the cap to provide leverage. The housing should twist/slide off (1.66 models).
 - DO NOT grip the hose barsbs.
 - For .85 and .675 models, use a wrench that is one size bigger than the bolts on the hose barsbs. (EX: use a 7/16 wrench on a .850 model)
 - DO NOT grip the hose barsbs.
 - Using a larger wrench will prevent the hose barsbs from being removed. The tool should only be used for leverage to loosen the part.
 - If the bottom intake is difficult to remove, remove the snap ring, disc, and screen and then use a wrench for removal.



Figure 4-1: Removal of the bottom intake and outer housing

2. Remove the lower Compression Ring (#21150042) by pulling it off the end of the internal center tube assembly (18" #21150091; 36" #21150136).

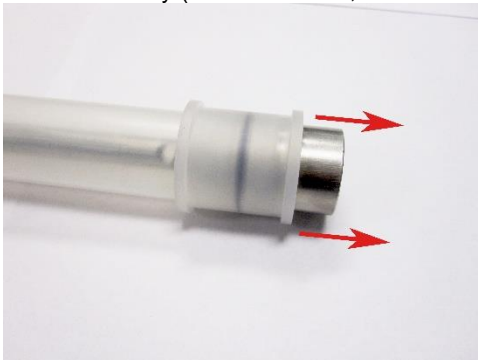


Figure 4-2: Removal of bottom Compression Ring

3. Remove the upper Compression Ring (#21150042) by sliding it over the bladder and over the end of the internal center tube assembly.



Figure 4-3: Removal of upper Compression Ring

4. Pulling from the lower end of the bladder (18" #21150054; 36" #21150141), slide the bladder off the internal center tube weldment assembly.

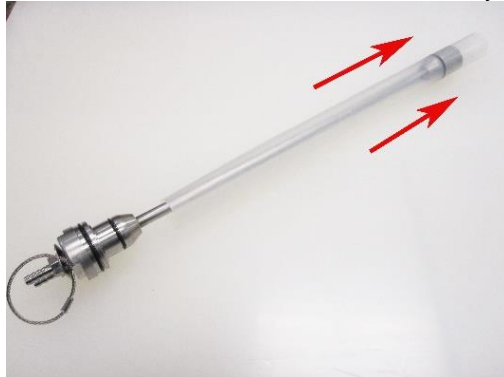


Figure 4-4: Removal of Bladder

5. Remove all O-rings.
 - If needed, use a flat object to help the O-ring out of the groove on the center tube weldment assembly,
 - Do not over-stretch, damage, or puncture the O-rings in any way.



Figure 4-5: Removal of O-rings

6. Clean and prepare replacement parts as needed.

1.66 Bottom Intake Disassembly

1. Pull the Check Ball Retainer from the Bottom Intake Assembly.



Figure 4-7a: Check Ball Retainer



Figure 4-7b: Removing Check Ball Retainer



Figure 4-7c: Check Ball Retainer Removed

2. Remove the SS Check Ball from the inside of the Bottom Intake Assembly.
3. Remove all O-rings on the assembly.
 - If needed, use a flat object to help the O-rings out of the grooves on the Bottom Intake Assembly
 - Do not over-stretch, damage, or puncture the O-rings in any way.
4. Clean and prepare replacement parts as needed.

1.66 Bottom Intake Reassembly

1. Install O-ring (#17500119) in the groove on the Check Ball Retainer.
 - Ensure that O-rings are not twisted.



Figure 4-8: Check Ball Retainer O-ring

2. Install O-rings (#11150332 & #1110318) in the grooves on the Bottom Intake Assembly.
 - Ensure that O-rings are not twisted.



Figure 4-9: O-rings on the Bottom Intake Assembly

3. Insert the SS Check ball into the Bottom Intake Assembly.



SS Check Ball must be inside the Bottom Intake Assembly.

The configuration shown may damage pump.



4. Push the Check Ball Retainer in ensuring the O-ring is no longer visible.

Bladder Reassembly (all models)

1. Install O-ring (#11150318) on the cap of the center tube weldment assembly.



Figure 4-10: Cap O-ring

2. Install O-ring (#11150319) on the upper end of the center tube weldment assembly.



Figure 4-11: Upper end O-ring

3. Install O-ring (#11150319) on the lower end of the center tube weldment assembly.



Figure 4-12: Lower O-ring

4. Slide bladder (18" #21150054; 36" #21150141) onto the internal center tube weldment assembly, over the O-ring (#11150319) on the bottom end of the center tube assembly, and then over the O-ring (#11150319) on the upper end of the center tube weldment assembly.
 - Do not to roll the O-rings.
 - If needed, use Deionized water or a silicone based lubricant on the O-ring seals to help the bladder slide over the O-rings.



Figure 4-13a: Sliding bladder on



Figure 4-13b: Bladder entirely on

5. Slide the Compression Ring (#21150042) over the bladder to the upper end of the center tube weldment assembly.



Figure 4-14a: Compression Ring on Bladder



Figure 4-14b: Compression ring secured

6. With the upper end of the bladder secured by the Compression Ring (#21150042) slide the second compression ring over the end of the bladder until the O-ring is visible in the middle of the Compression Ring.
- Compression rings that are made from other materials (ex: PTFE), will not be clear. The O-ring will not be visible.



Figure 4-15: Bottom Compression ring with visible O-ring

7. An alternate way to assemble the bladder is to:
- a) Place both Compression Rings on the center tube weldment assembly
 - b) Slide the bladder over the bottom O-ring, through the compression rings, and over the top O-rings until the bladder is flush with the upper end of the center tube weldment assembly (see Figure 4-13b)
 - c) Slide the top compression ring to the upper end of the center tube weldment assembly (see Figure 4-14b)
 - d) Slide the bottom compression ring to the lower end of the center tube weldment assembly (see Figure 4-15)

8. Replace the outer housing (18" #21150041; 36" #51150141)
- Be sure the outer housing is sealed against the upper cap.



Figure 4-16a: Incorrect Installation



Figure 4-16b: Correct Installation

9. Replace the bottom intake assembly by screwing it into the bottom of the pump.
 - Reassemble bottom intake if previously disassembled by inserting the screen, disc, and snap ring into the lower cap.
 - Be sure the bottom intake assembly is sealed against the outer housing.



Figure 4-17a: Incorrect Installation



Figure 4-17b: Correct Installation



Inspect O-rings and bladder for damage.
Replace if torn, ripped, or excessively worn.

Section 5: System Troubleshooting



Read and understand the portable generator and/or portable air compressor user manual for proper installation and operation and Earth grounding instructions. If using portable compressed gas tanks be sure to exercise proper caution and safety protection devices as outlined by the supplier and any additional safety requirements mandated by local jurisdiction.

Do not operate this equipment if it has been damaged, broken, smashed, or excessively worn. Broken components pose a severe threat to the safety of the operator and his or her environment. Contact Geotech for any service or repair needs.

Problem: Air in fluid line or flow cell.

Solutions

- Ensure timer settings on controller prevent bladder from being over pressurized. Verify PTFE collar is in place at either end of the bladder. Inspect O-rings for damage and replace if needed. Inspect bladder for cuts and holes and replace if needed.
- Occasionally, significant amounts of dissolved gasses can be encountered in ground water, especially in deep well areas with significant hydraulic pressures. When this fluid is exposed to atmosphere, out-gassing may occur. Refer to your Standard Operating Procedure for specifics on dealing with this situation.

Problem: Not pumping any fluid (or no air).

Solutions:

- Verify the pump is below static water level. Inspect airline tubing for kinks, cracks or breaks. Make sure you are not getting leaks at any fittings. Replace damaged or worn tubing. Cut tubing back and re-terminate at leaking fitting joint.

Problem: Not pumping any fluid (air is coming out fluid discharge line).

Solutions:

- Disassemble pump and inspect the O-rings and bladder. Replace either or both if damaged. Verify the pump is below static water level.

If you are experiencing other problems than mentioned above, please call Geotech Technical Support for immediate assistance, (800) 833-7958.

Section 6: System Specifications

	1.66x36"	1.66x18"	0.85	0.675
Pump Housing	316 SS			
Pump Ends	316 SS			
Bladder Material	PTFE (OPTIONAL PE)			
Bladder Collar Material	PTFE			
Intake Screen	316 Stainless Steel, 100 Mesh [0.001"(.025mm) opening]			
Outer Diameter	1.66" 40 mm	1.66" 40 mm	.850" 21.6 mm	.675" 17 mm
Length w/ screen	40" 101.6 cm	19" 48.2 cm	18 5/8" 47.3 cm	18 3/4" 47.6 cm
Weight	5.0 lbs. 2.27 Kg	3.0 lbs. 1.36 Kg	1.1 lbs. 500 g	0.83 lbs. 376 g
Volume/Cycle	11 oz. 310 mL	5 oz. 150 mL	1 oz. 29 mL	0.5 oz. 15 mL
Min. Well I.D.	2" 50 mm	2" 50 mm	1" 25 mm	.75" 19 mm
Min. Operating Pressure	5 psi (ash)* (.3 bar)			
Operating Pressure	100psi 7 bar			
Proof Pressure	200psi 14 bar			
Burst Pressure	300 psi 21 bar			
Max. Sampling Depth	200' 61 m			
Operating Temperature	PTFE: 32°F (0°C) to 212°F (100°C) PE: 32°F -185°F (0°C -85°C) ambient air or fluid temperature			
Tubing Size				
Air Line	.17" ID x .25" OD (4 mm ID x 6 mm OD)			
Discharge Line	0.25" ID x .375" OD (6 mm ID x 10MM OD)		.17" ID x .25" OD (4 mm ID x 6 mm OD)	

*ash = above static head

System Specifications, continued:

IP rating: (NA) Submersible to 500' (152m) of water column.




Special care must be taken to avoid burns and exposure to out-gassing of volatiles when pumping fluids at elevated temperatures.



Special air source considerations need to be taken into account 9,000' (2.75 km) above mean sea level (AMSL).

Section 7: Replacement Parts List

1.66 Bladder Pump Components, 18" model shown

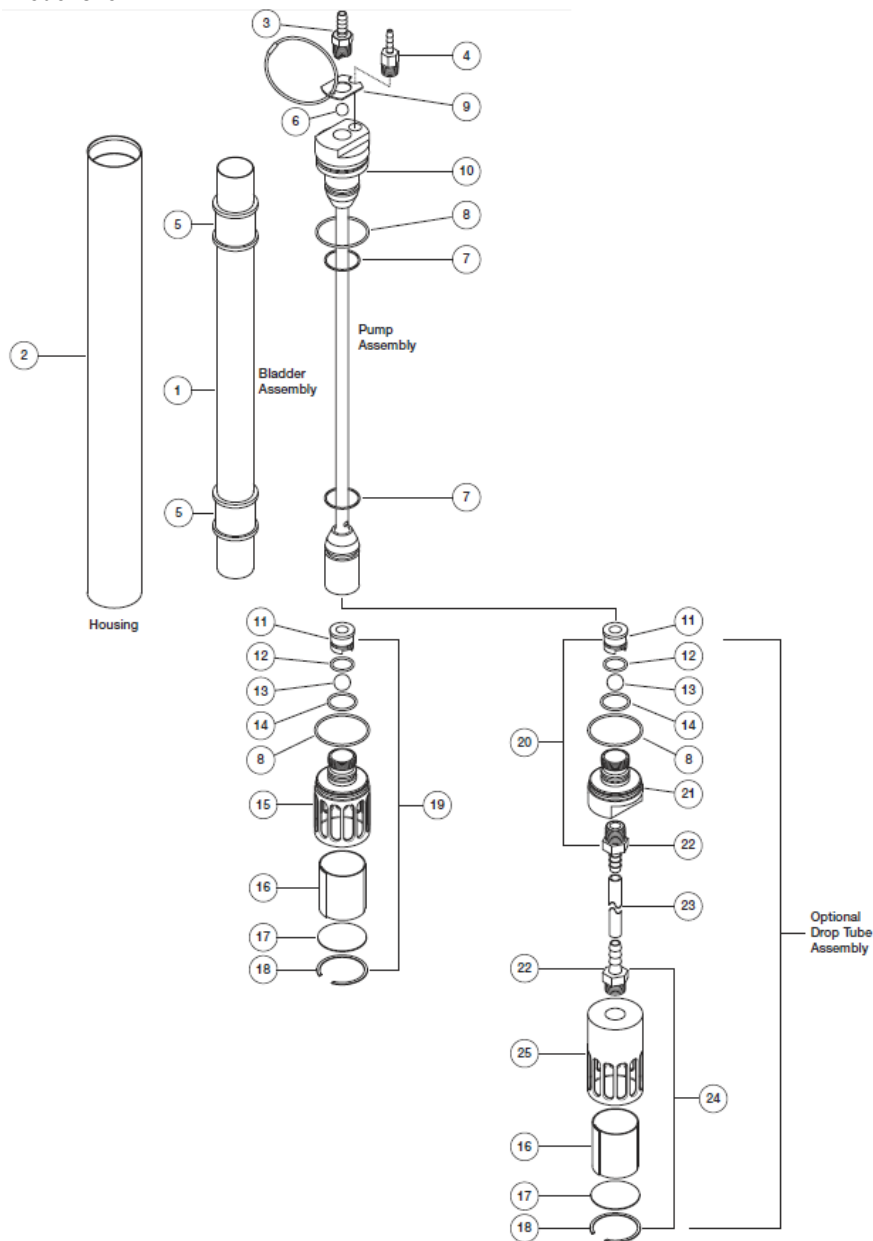


**Bladder Pump, 1.66, Portable Stainless Steel, Screened
Length: 18" (81150034) or 36" (81150045)**

Item	Qty	Description	Part No.
1	1	BLADDER, PTFE, 1.66 x 18,PBP	21150054
1	§	BLADDER, PTFE, 1.66 x 36, PBP	21150141
1	§	BLADDER, PE, 1.66 x 18,PBP, EA	21150055
1	§	BLADDER, PE, 1.66 x 36,PBP, EA	21150140
1	§	BLADDER, PE, 1.66 x 18,PBP,12PK	21150056
1	§	BLADDER, PE, 1.66 x 36,PBP,12PK	21150139
2	1	HOUSING, SS6, 1.66 x 18,PBP	21150041
2	§	HOUSING, SS6, 1.66 x 36,PBP	51150141
3	1	HOSEBARB, SS6, MOD, 1/4 X 1/4 MPT MODIFIED DISCHARGE	11150106
4	1	HOSEBARB, SS6, .170 X 1/8 MPT AIR LINE	21150019
5	2	RING, COMPRESSION, PTFE 1.66 BP, CE PORTABLE	21150042
6	1	BALL, SS6, 3/8"	17500081
7	2	O-RING, VITON, 2.5MM X 23MM	11150319
8	2	O-RING, VITON, 2.5MM X 36MM	11150318
9	1	ASSY, HANGER, 1.66, PBP, SFTY CB, CE	51150068
10	1	CAP UPPER WELDMENT, SS, 1.66, 18",PBP CE	21150091
10	§	CAP UPPER WELDMENT, SS, 1.66, 36",PBP CE	21150136
11	1	PLUG, BALL RETAINER, 1.66 PBP CE	21150096
12	1	O-RING, VITON, #014	17500119
13	1	BALL, SS6, 1/2"	17500082
14	1	ORING, VITON, 2MM X 20MM	11150332
15	1	CAP LOWER, SS, 1.66, PRTBL BP, CE	21150094
16	1	SCREEN, INTAKE, 1.66, SS6, PBP, CE	21150095
17	1	DISC, SS, 1.66, PBP	21150148
18	1	RING, SNAP, SS6, INTERNAL, 1.66 BP PORTABLE	11150051
19	1	ASSY, BOTTOM INTAKE 1.66 PBP, CE	51150067
20	§	ASSY, LOWER CAP, 1.66 PBP, DROP TUBE, CE	51150128
21	§	DROP TUBE, CAP LOWER, 1.66 PBP, CE SS	21150098
22	§	HOSEBARB, SS6, 1/2 X 3/8 MPT	16600217
23	§	TUBING, PE, 1/2 X 5/8, FT POLYETHYLENE	87050504
24	§	ASSY, INTAKE, 1.66 SS, DROP TUBE, WITH 1/2" HOSEBARB	51150071
25	1	INTAKE, DROP TUBE, 1.66"	21150113
	1	MANUAL, PBP, CE	11150323
	§	SPARE PARTS KIT, 1.66, PBP, CE [Items 5 (2), 6, 7 (2), 8 (2), 12, 13, 14, 16, 17, 18]	51150066
	§	KIT, 1.66 PBP, O-RING SET, CE O-RING SERVICE KIT [Items 7 (2), 8 (2), 12, 14]	91150012

§ = Sold Separately

.850 Bladder Pump Components

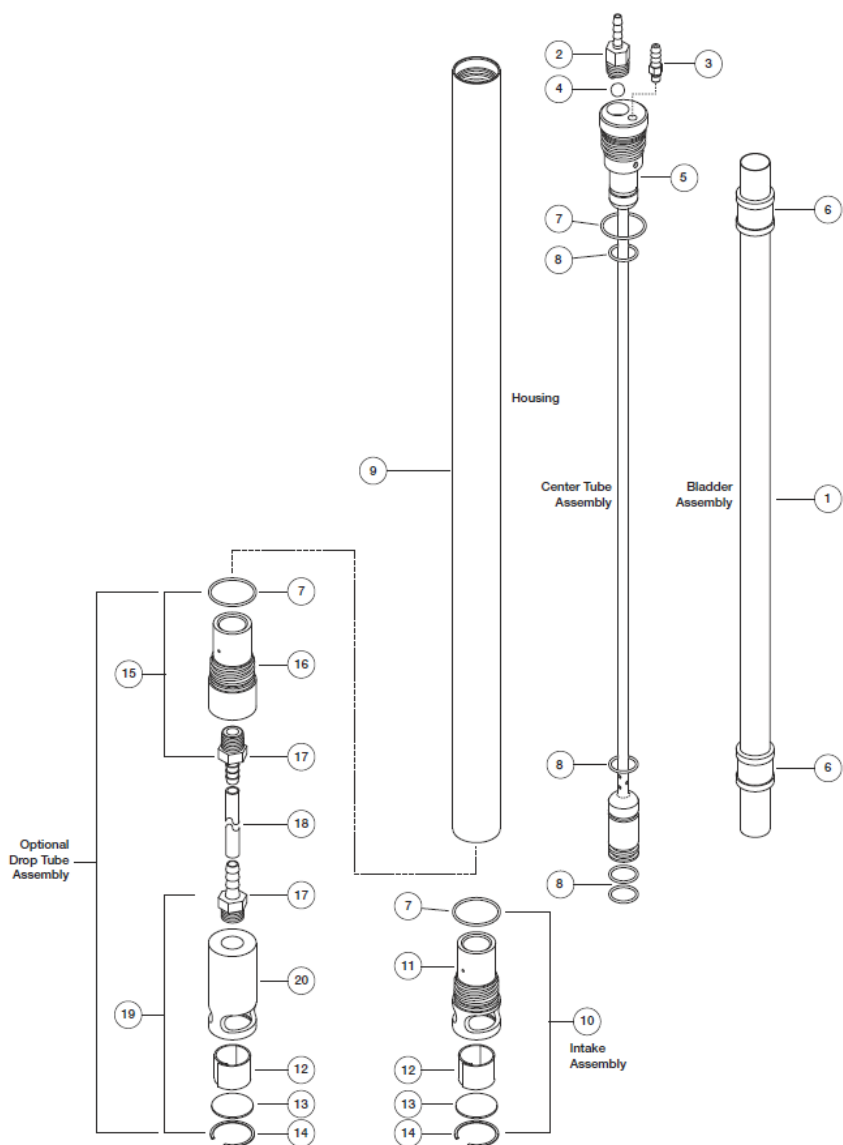


Bladder Pump, .850, Stainless Steel, Screened - 81150115

Item	Qty	Description	Part No.
1	1	BLADDER ,PTFE, .85 BP	51150051
1	§	BLADDER, PE, .85 BP, EA	21150100
1	§	BLADDER, PE, .85, CE, 12PK	21150099
2	1	HOSEBARB, SS6, MOD, .170 X 1/8 NPT DISCHARGE	11150118
3	1	HOSEBARB, SS6, .170 X 10/24 AIR	17200245
4	2	BALL, SS6, 1/4"	17500079
5	1	CAP UPPER WELDMENT, SS6, .85 BP	21150045
6	2	RING, COMPRESSION, PTFE, .850, CE, BP	21150048
7	2	O-RING, VITON, CS .0629, ID 17.1MM	17500112
8	4	O-RING, VITON, #012	17500111
9	1	HOUSING, SS6, .850, BP	21150047
10	1	ASSY, BOTTOM INTAKE, .85 BP	51150118
11	1	CAP, LOWER, SS6, .850, BP	21150046
12	1	SCREEN, INTAKE, SS6, .85 BP	21150050
13	1	DISC, SS, .85 BP	21150049
14	1	RING, SNAP, SS6, INTERNAL, .85 BP	11150053
15	§	ASSY, LOWER CAP, .850 BP, DROP TUBE, CE, W/ 1/4" HOSEBARB	51150129
16	§	DROP TUBE, CAP LOWER, .850 BP, CE SS	21150109
17	§	HOSEBARB, SS6, 1/4 X 1/8 MPT	17200072
18	§	TUBING, PE, 1/4 X 3/8, FT POLYETHYLENE	87050502
19	§	ASSY, INTAKE, .850 BP, DROP TUBE, CE, W/ 1/4" HOSEBARB	51150069
20	§	INTAKE, DROP TUBE, .850 BP, CE, SS	21150111
Not Shown:			
	1	MANUAL, PBP, CE	11150323
	§	SPARE PARTS KIT, .85, BP, CE [Items 4 (2), 6 (2), 7 (2), 8 (4), 12, 13, 14]	51150123
	§	KIT, .85 BP, O-RING SET, CE, O-RING SERVICE KIT [Items 7 (2), 8 (4)]	91150013

§ = Sold Separately

.675 Bladder Pump Components

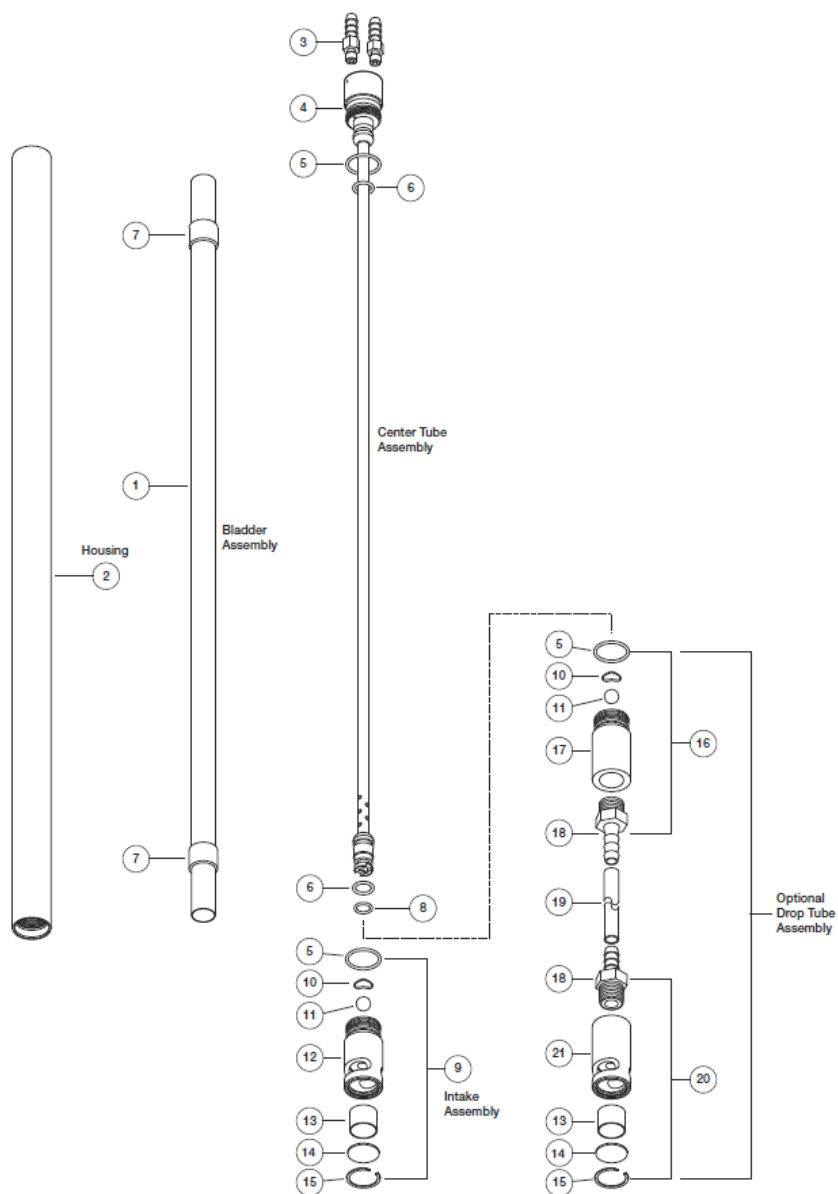

Bladder Pump, .675, Stainless Steel, Screened - 81150117

Item	Qty	Description	Part No.
1	1	BLADDER, PTFE, .675, BP, CE	51150126
1	§	BLADDER, PE, .675, EA	21150102
1	§	BLADDER, PE, .675, CE, 12PK	21150101
2	1	HOUSING, SS6, .675, BP	21150032
3	2	HOSEBARB, SS6, .170 X 10/24 AIR	17200245
4	1	WELDMENT, INNER, SS6, .675 BP	51150125
5	2	O-RING, VITON, #014	17500119
6	2	O-RING, VITON, #107	17500604
7	2	RING, COMPRESSION, PTFE, .675 BP, CE	21150106
8	1	O-RING, VITON, #009	17500113
9	1	ASSY, BOTTOM INTAKE, .675, BP	51150120
10	1	RETAINER, BALL, .675 BP, TACO	21150087
11	1	BALL, SS6, 1/4"	17500079
12	1	CAP, LOWER, SS6, .675 BP	21150031
13	1	SCREEN, INTAKE, SS6, .675 BP	11150317
14	1	DISC, SS, .675 BP	21150033
15	1	RING, SNAP, SS, .675 BP	11150182
16	§	ASSY, LOWER CAP, .675 BP, DROP TUBE, CE	51150130
17	§	DROP TUBE, CAP LOWER, .675 BP, CE SS	21150110
18	§	HOSEBARB, SS6, 1/4 X 1/8 MPT	17200072
19	§	TUBING, PE, 1/4 X 3/8, FT POLYETHYLENE	87050502
20	§	ASSY, INTAKE .675 BP, DROP TUBE CE	51150070
21	§	INTAKE, DROP TUBE, .675 BP, CE, SS	21150112
Not Shown:			
	1	MANUAL, PBP, CE	11150323
	§	SPARE PARTS KIT, .675, BP, CE [Items 5(2), 6 (2), 7(2), 8, 10, 11, 13, 14, 15]	51150124
	§	KIT, .675 BP, O-RING SET, CE O-RING SERVICE KIT [Items 5 (2), 6 (2), 8]	91150014

§ = Sold Separately

DOCUMENT REVISIONS		
Project #	DESCRIPTION	REV/DATE
1375	Release, SP	3/11/2014
-	Updated back page information, SP	3/2/2015
1482	Added 1.66"x36" pump length option & flow rate examples, SP	12/08/15
-	Corrected Drop Tube tubing size for 1.66 models, SP	1/11/2016
1482	Section 2, added note about 1.66x36" model requiring BP Controller 300 for full bladder volumes when pump deployed deeper than 155ft, SP	3/15/2016
1526	Updated bladder pump maintenance, StellaR	2/6/2017
1560	Changes PTFE Disc to SS- StellaR	5/25/2017
1749	Changed Document Revision: EDCF => Project. Removed all "project" call outs. Changed all discs in all builds to SS (from PTFE) (.850 and .675 builds)- StellaR	3/18/2019
1854	Updated cover image – StellaR	10/18/2019
1918	Updated maintenance instructions with alternate way to reassemble bladder. Removed specified part numbers – StellaR	1/14/2020
2083	Changed note on page 6 to remove specific PBP length (1.66 x 36") – StellaR	9/23/2020
2281	Updated CE document and removed Spanish address – AH	6/16/2023
2371	Added Intake Screen to System Specifications–GR	11/14/2023

Notes



EC Declaration of Conformity

Manufacturer:

Geotech Environmental Equipment, Inc.
2650 E 40th Avenue
Denver, CO 80205

Declares that the following products,

Product Name: Geotech Portable Bladder Pump, CE

Model(s): 1.66" Bladder Pump
.850" Bladder Pump
.675" Bladder Pump

Year of manufacture: 2023

Conform to the protection requirements of 2006/42/EC Machinery Directive by application of the following standards:

809+A1/AC:2010
61010-1 Ed. 9.0 en:2018

Year of affixation of the CE Marking: 2023

Production control follows the ISO 9001:2015 regulations and includes required safety routine tests.

This declaration issued under the sole responsibility of Geotech Environmental Equipment, Inc.

Joe Leonard
Product Development

Serial number _____

The Warranty

For a period of one (1) year from date of first sale, product is warranted to be free from defects in materials and workmanship. Geotech agrees to repair or replace, at Geotech's option, the portion proving defective, or at our option to refund the purchase price thereof. Geotech will have no warranty obligation if the product is subjected to abnormal operating conditions, accident, abuse, misuse, unauthorized modification, alteration, repair, or replacement of wear parts. User assumes all other risk, if any, including the risk of injury, loss, or damage, direct or consequential, arising out of the use, misuse, or inability to use this product. User agrees to use, maintain and install product in accordance with recommendations and instructions. User is responsible for transportation charges connected to the repair or replacement of product under this warranty.

Equipment Return Policy

A Return Material Authorization number (RMA #) is required prior to return of any equipment to our facilities, please call our 800 number for appropriate location. An RMA # will be issued upon receipt of your request to return equipment, which should include reasons for the return. Your return shipment to us must have this RMA # clearly marked on the outside of the package. Proof of date of purchase is required for processing of all warranty requests.

This policy applies to both equipment sales and repair orders.

FOR A RETURN MATERIAL AUTHORIZATION, PLEASE CALL OUR
SERVICE DEPARTMENT AT 1-800-833-7958

Model Number: _____

Serial Number: _____

Date of Purchase: _____

Equipment Decontamination

Prior to return, all equipment must be thoroughly cleaned and decontaminated. Please make note on RMA form, the use of equipment, contaminants equipment was exposed to, and decontamination solutions/methods used. Geotech reserves the right to refuse any equipment not properly decontaminated. Geotech may also choose to decontaminate the equipment for a fee, which will be applied to the repair order invoice.



Geotech Environmental Equipment, Inc.
2650 East 40th Avenue Denver, Colorado 80205
(303) 320-4764 • (800) 833-7958 • FAX (303) 322-7242
email: sales@geotechenv.com
website: www.geotechenv.com

Printed in the United States of America