



**1500'-3000' (450 m-925 m)
ET/MDPE Tape
Water Level Meter
(with optional electric rewind)**

Installation and Operation Manual

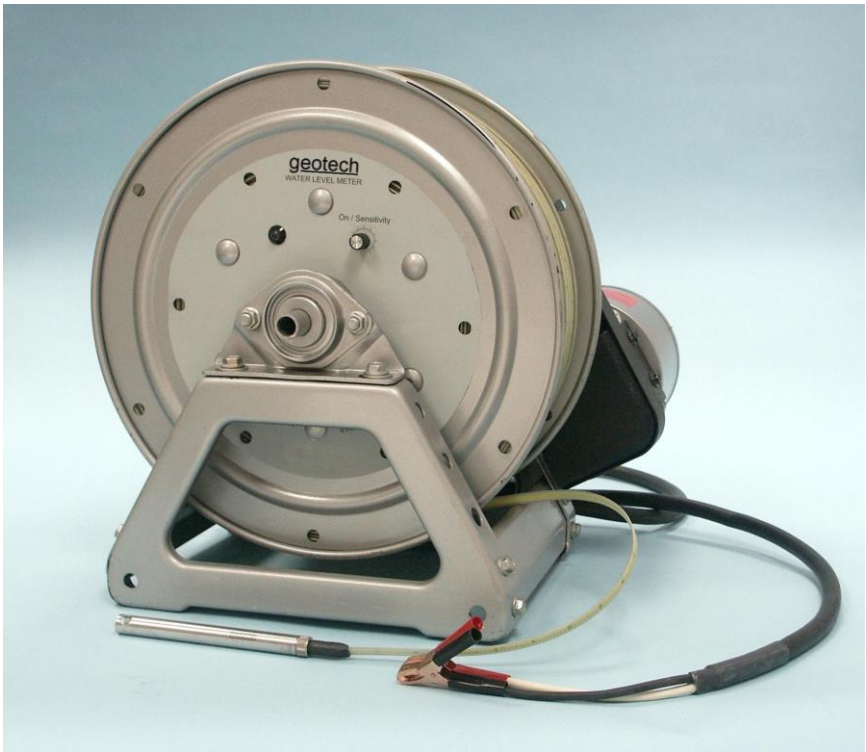


Table of Contents

DOCUMENTATION CONVENTIONS	2
Section 1: System Description	3
Function and Theory	3
System Components	4
Section 2: System Installation.....	6
Manual Reel	6
Electric Reel	6
Optional Tape Weight Installation	7
Section 3: System Operation.....	9
Section 4: System Maintenance	10
Battery Replacement.....	10
Cleaning	10
Cleaning the Optical Probe	10
Section 5: System Troubleshooting	11
Section 6: System Specifications	12
Section 7: System Schematic.....	13
Section 8: Replacement Parts List.....	14
The Warranty	17

DOCUMENTATION CONVENTIONS

This uses the following conventions to present information:



WARNING

An exclamation point icon indicates a **WARNING** of a situation or condition that could lead to personal injury or death. You should not proceed until you read and thoroughly understand the **WARNING** message.



CAUTION

A raised hand icon indicates **CAUTION** information that relates to a situation or condition that could lead to equipment malfunction or damage. You should not proceed until you read and thoroughly understand the **CAUTION** message.



NOTE

A note icon indicates **NOTE** information. Notes provide additional or supplementary information about an activity or concept.

Section 1: System Description

Function and Theory

The Geotech ET/MDPE Water Level Meter (ET/MDPE) is a portable instrument used to accurately measure water levels in monitoring wells and bore holes. The sensor consists of a stainless steel and PTFE probe attached to a reel-mounted, polyethylene-coated engineer's tape. The engineer's tape comes in standard or metric graduations, and is accurate to 1/100th of a foot, or 1 millimeter.

The sensor relies on fluid conductivity to determine the presence of water. An audible signal and visible LED activate when the probe contacts water. It features adjustable sensitivity, used to prevent false triggering.

The ET/MDPE is intended for use as a depth to water measuring device. Using the ET/MDPE for any other purpose may compromise safety of the operator and/or void manufacturer's warranty.



To avoid damage to tape and strain relief, do not over tighten reel with probe in storage position.

System Components



Figure 1-1: Manual Reel Front View

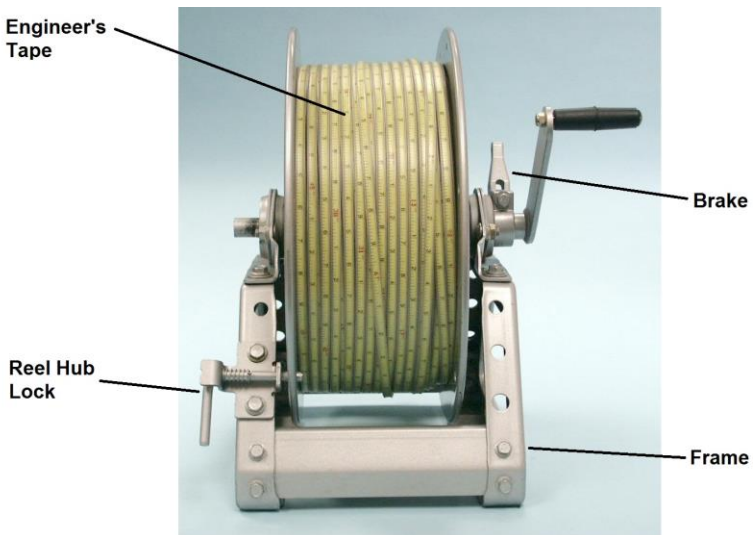


Figure 1-2: Manual Reel Side View



Figure 1-3: Electric Reel Front View

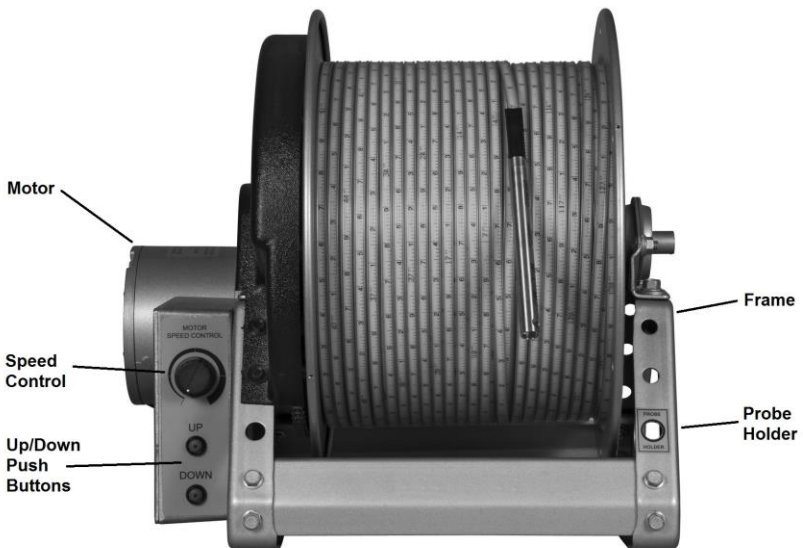


Figure 1-4: Electric Reel Side View

Section 2: System Installation

Manual Reel

Carefully lower the probe into the well, using the tape guard to prevent damage to the tape.



Do not use the tape guard in wells larger than 4" (10 cm), as it may fall down the well.

In wells larger than 4" (10 cm) be careful not to let the tape scrape against the lip of the well casing.

Electric Reel

1. Plug power cord into the control box of the reel.
2. Attach red clip to positive battery terminal, and black clip to the negative battery terminal.
3. Turn the speed control dial fully counter-clockwise. Press desired button (up/down). Slowly rotate the speed control until reel is rotating at the desired speed.



When winding the tape up on the reel, pay careful attention so that the tape and/or probe do not get caught or tangled.



Keep hands and loose article of clothing away from chain.
DO NOT operate unit without a guard!

If you are not able to hang the frame onto the wellhead, then either use the white plastic leader guard (standard with all units), or the optional Tape Guide, to prevent the edge of the wellhead from damaging the tape. Figure 2-2 is an example of the two parts



Figure 2-1: Tape Leader Guard, Tape Guide and Tape Weight (Optional)



Do not use the tape leader guard in wells larger than 4" (10cm), as it may fall down the well. The optional tape weight helps sink probe into a deep or crooked well.

Optional Tape Weight Installation

Attach tape weight to tape near probe end being lowered into well.

- 1) Loosen the screws using an Allen wrench.
- 2) Slide the weight onto the tape.
- 3) Tighten the screws.



Figure 2-2: Fitting (Optional) Tape Weight



Figure 2-3: Tightening (Optional) Tape Weight

Section 3: System Operation

1. Turn the instrument on with the ON/SENSITIVITY switch. If the buzzer makes a loud signal and the light is visible, the battery is adequate for normal operation.
2. Lower the probe down the well to the water surface. The light and buzzer will activate. At this point, adjust the probe sensitivity dial by rotating it counter-clockwise until the light and buzzer shut off.
3. With the probe still in contact with the water, adjust the probe sensitivity dial clockwise until the light and buzzer barely activate. In this setting, the probe will detect water levels but will not be affected by false triggering.
4. Water level measurements can now be taken from the top of the casing or any reference point.
5. The meter should be stored with the switch in the OFF position. If the meter will be stored and not used for three (3) months or longer, remove the battery to prevent battery leakage from damaging the meter.



To avoid damage to tape and strain relief, do not over tighten reel with probe in storage position.

Section 4: System Maintenance

Battery Replacement

Replace the battery when the audible and visible signals become weak or the unit does not operate.

1. Gently remove the battery tray.
2. Remove the old battery and replace it with a new one.



Be aware of the polarity (+, -) of the battery when placing the new battery in the tray. Use a 9V alkaline battery only.

Cleaning

The ET/MDPE can be cleaned with mild detergents such as trisodium phosphate (TSP). If other detergents are used, take care to select detergents that are compatible with PTFE, polypropylene, and stainless steel. The reel should not be submerged in any liquid, but may be cleaned with a damp cloth.

Cleaning the Optical Probe

The optical end of the probe should be periodically cleaned with a non-abrasive cleaner such as isopropyl alcohol, xylene, methanol, phosphate free type cleaner. To clean the sensor probe head, place a small amount of the cleaner on a cotton swab; rub the optical face and around the conductivity sensor wire to remove all foreign matter. Repeat this process until all foreign matter has been removed.

Section 5: System Troubleshooting

Problem: No signal (audible or visible) when unit is turned on.

Solutions:

- The battery is discharged. Check or change battery (Section 4).
- The circuit is malfunctioning. Contact Geotech Service.

Problem: No indication of water.

Solutions:

- The conductive contact is dirty. Clean the contact (Section 4).
- There is an open connection in the tape. Replace tape and/or probe.
- The circuit is malfunctioning. Contact Geotech Service.

Problem: The signal (audible or visible) is intermittent.

Solutions:

- There is an open connection in the tape. Replace tape and/or probe.
- There is a loose connection in the circuit or the probe. Repair the connection.

Problem: The signal (audible or visible) is continuous when not in water.

Solutions:

- The conductive contact is dirty (causing bridging). Clean the contact (Section 4).
- There is a short in the tape and/or probe. Replace tape and/or probe.
- The circuit is malfunctioning. Contact Geotech Service.

For technical assistance, call Geotech Environmental Equipment at 1-303-320-4764 or 1-800-833-7958

Section 6: System Specifications

Probe

Material: Stainless Steel and PTFE
Weight: 4.53oz (128 g)
Diameter: 5/8 inch (1.6 cm)
Length: 7 ¾ inches (19.7 cm)
Minimum Detectable Conductivity: 10 µS

Tape

Material: Polyethylene coated stainless
Length/Weight: 1500' / 450 m = 61 lbs / 27.7 kg (manual)
1500' / 450 m = 80 lbs / 36.3 kg (electric)
2000' / 600 m = 68 lbs / 31.0 kg (man.)
2000' / 600 m = 87 lbs / 39.5 (elec.)
2500' / 750 m = 79 lbs / 35.8 (man.)
2500' / 750 m = 98 lbs / 44.5 (elec.)
3000' / 925 m = 86 lbs / 39.0 (man.)
3000' / 925 m = 105 lbs / 47.6 (elec.)

Tape accuracy: 100th of a foot (3 mm) / 100' (30.5 m)

Reel/Frame

Material: Steel and Aluminum
Size: 1500' to 2000' 18.25" H x 14" W x 15" L (man.)
(46.4 cm H x 35.6 cm W x 38.1 cm L)
18.25" H x 14" W x 20.5"L (elec.)
(46.4 cm H x 35.6 cm W x 52.1 cm L)
2500' to 3000' 18.25" H x 14" W x 21.0"L (man.)
(46.4 cm H x 35.6 cm W x 53.0 cm L)
18.25" H x 14" W x 26.5"L (elec.)
(46.4 cm H x 35.6 cm W x 67.3 cm L)

Unit

Battery: 9V alkaline
Battery Life: Continuously detecting 8 hours
On not detecting >1 year
Output tone: 5 kHz
Operating Temperature: 32-140°F (0-60°C)
Storage Temperature: -40-150°F (-40-66°C)
Response Time: <10 milliseconds
Tape Weight (Optional) 1" (2.54cm) OD, 4" (10.16cm) Long,
12.74oz (361g)

Section 7: System Schematic

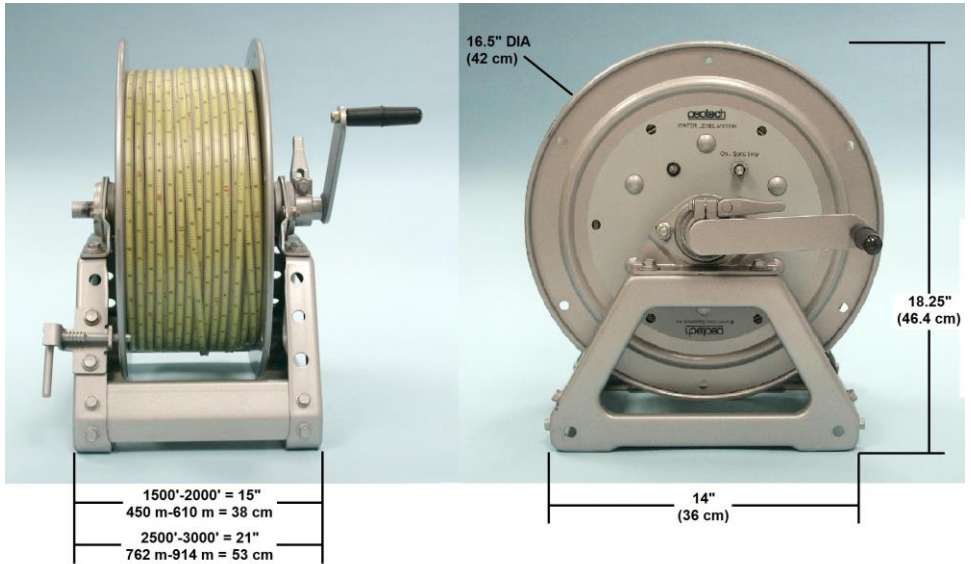


Figure 7-1: Manual Reel Front and Side View

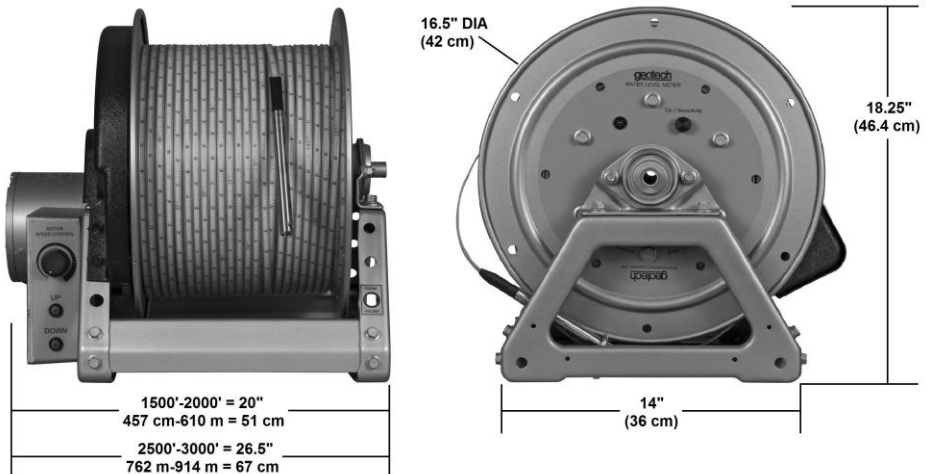


Figure 7-2: Electric Reel Front and Side View

Section 8: Replacement Parts List

Parts Description	Part Number
REEL,GEOWLM,1500/2000',MANRWD	52050144
REEL,GEOWLM,1500/2000',ELCRWD	52050145
REEL,GEOWLM,2500/3000',MANRWD	52050259
REEL,GEOWLM,2500/3000',ELCRWD	52050258
ASSY,TAPE,GEOWLM,POLY,1500FT	52050124
ASSY,TAPE,GEOWLM,POLY,2000FT	52050125
ASSY,TAPE,GEOWLM,POLY,2500FT	52050175
ASSY,TAPE,GEOWLM,POLY,3000FT	52050255
ASSY,TAPE,GEOWLM,MDPE,1500'	52050224
ASSY,TAPE,GEOWLM,MDPE,2000'	52050225
ASSY,TAPE,GEOWLM,MDPE,2500'	52050250
ASSY,TAPE,GEOWLM,MDPE,3000'	52050251
ASSY,TAPE,GEOWLM,POLY,450M	52050248
ASSY,TAPE,GEOWLM,POLY,600M	52050249
ASSY,TAPE,GEOWLM,POLY,750M	52050256
ASSY,TAPE,GEOWLM,POLY,925M	52050257
ASSY,TAPE,GEOWLM,MDPE,450M	52050260
ASSY,TAPE,GEOWLM,MDPE,600M	52050261
ASSY,TAPE,GEOWLM,MDPE,750M	52050252
ASSY,TAPE,GEOWLM,MDPE,925M	52050253
ASSY,PROBE,GEOWLM	52050052
GUARD,LEADER,PROPAMIDE,NATURAL	12050060
GUIDE,TAPE,PVC	22050601
MANUAL,WATER LEVEL 1500'-2000' METER W/ OPTIONAL ELECTRIC REW TAPE WEIGHT (OPTIONAL)	12050339 52050277
BATTERY, HOLDER, 9V, QUICK CHANGE POCKET O-RING	12050065 17500202
ASSY,CABLE,POWER,WLM,ELECTRIC REWIND	51200036

NOTES

NOTES

The Warranty

For a period of one (1) year from date of first sale, product is warranted to be free from defects in materials and workmanship. Geotech agrees to repair or replace, at Geotech's option, the portion proving defective, or at our option to refund the purchase price thereof. Geotech will have no warranty obligation if the product is subjected to abnormal operating conditions, accident, abuse, misuse, unauthorized modification, alteration, repair, or replacement of wear parts. User assumes all other risk, if any, including the risk of injury, loss, or damage, direct or consequential, arising out of the use, misuse, or inability to use this product. User agrees to use, maintain and install product in accordance with recommendations and instructions. User is responsible for transportation charges connected to the repair or replacement of product under this warranty.

Equipment Return Policy

A Return Material Authorization number (RMA #) is required prior to return of any equipment to our facilities, please call our 800 number for appropriate location. An RMA # will be issued upon receipt of your request to return equipment, which should include reasons for the return. Your return shipment to us must have this RMA # clearly marked on the outside of the package. Proof of date of purchase is required for processing of all warranty requests.

This policy applies to both equipment sales and repair orders.

FOR A RETURN MATERIAL AUTHORIZATION, PLEASE CALL OUR
SERVICE DEPARTMENT AT 1-800-833-7958.

Model Number: _____

Serial Number: _____

Date of Purchase: _____

Equipment Decontamination

Prior to return, all equipment must be thoroughly cleaned and decontaminated. Please make note on RMA form, the use of equipment, contaminants equipment was exposed to, and decontamination solutions/methods used. Geotech reserves the right to refuse any equipment not properly decontaminated. Geotech may also choose to decontaminate the equipment for a fee, which will be applied to the repair order invoice.

Geotech Environmental Equipment, Inc.
2650 East 40th Avenue Denver, Colorado 80205
(303) 320-4764 • **(800) 833-7958** • FAX (303) 322-7242
email: sales@geotechenv.com website: www.geotechenv.com